

WELCOME TO THE
FCCLG KITCHEN

BEST PRACTICES



2023

WWW.FCCLG.ORG
(708) 352-0800



DO USE THE CUTTING SHEETS WHEN YOU NEED TO CUT OR SLICE FOOD.



DO USE THE OVEN MITTS WHEN WORKING WITH OUR BURNERS AND OVENS.



DO USE OUR MEASURING CUPS, KNIVES, METAL TRAYS, COOKING UTENSILS, POTS AND PANS



ALL THE DOS



ALL THE DOS



DO TURN ON THE EXHAUST HOOD AND LIGHTS BEFORE USING THE STOVE.



DO USE THE TABLE EXTENSION OF OUR WOODBLOCK TABLE.

(FYI: TAKES TWO PEOPLE TO SET IT BACK DOWN)

USE ONLY THESE BOTTLES OF VINEGAR & WATER SPRAY TO CLEAN THE WOODBLOCK TABLE.



ALL THE DOS



DO USE THE APPROPRIATE CLEANING SUPPLIES TO CLEAN YOUR STATION BEFORE YOU LEAVE.



DO SEPARATE RECYCLING FROM WASTE REFUSE AND DISPOSE IN PROPER OUTSIDE BIN AT END OF DAY.



(FYI: YOU MUST BREAKDOWN ALL BOXES BEFORE PUTTING IN CONTAINER)

DO USE THE LARGE BLACK KITCHEN BAGS TO LINE THE GARBAGE BINS AFTER THROWING OUT TRASH.



ALL THE DON'TS



DON'T USE THE GRIDDLE.

**DON'T REMOVE THE
TIN FOIL COVERING.**



**DON'T USE THE FOOD &
SOUP WARMERS.**



**DON'T USE THE MEAT
SLICER.**



**DON'T USE THE DESIGNER
PLATES OR PORCELAIN
CUPS FOR SERVING.**



ALL THE DON'TS



DON'T PUT GREASE OR FOOD WASTE DOWN THE DRAINS.




DON'T LEAVE COOKING REMNANTS ON THE STOVE. WIPE DOWN CLEAN BEFORE YOU LEAVE.

DON'T PLACE HOT POTS OR PANS DIRECTLY ON THE WOODBLOCK TABLE.





THE COMMERCIAL DISHWASHER

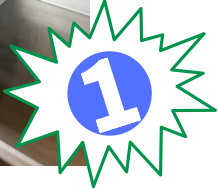

FIRST! HAVE THE LID IN THE UP POSITION.



CHECK SCRAP TRAYS



MAKE SURE THE SCRAP TRAYS ARE IN THIS FORWARD POSITION



TURN BLUE VALVE CLOCKWISE



TURN THIS VALVE TO YOUR RIGHT & BE SURE IT IS TURNED TIGHTLY.



TURN THIS SWITCH ON



CLOSE THE LID



PUSH DOWN TOGGLE TO **FILL/RINSE**



ONCE YOU PUSH TOGGLE SWITCH TO THE **FILL & RINSE POSITION, THE DISHWASHER WILL BEGIN TO FILL WITH WATER.**



WAIT 2 MINUTES



AFTER **TWO MINUTES LIFT THE LID TO CHECK THE WATER LEVEL.**

SPRAYER AUTOMATICALLY STOPS WHEN LID IS LIFTED!


CHECK WATER LEVEL



LIFT HANDLE OF DISHWASHER TO CHECK THE **WATER LEVEL. THE WATER NEEDS TO BE LEVEL WITH LIP OF THIS TUBE. IF NOT, CLOSE THE COVER TO ADD MORE WATER FOR **10 SECONDS**.**


ONCE WATER IS LEVEL...

PUT TOGGLE IN THE **OFF** POSITION

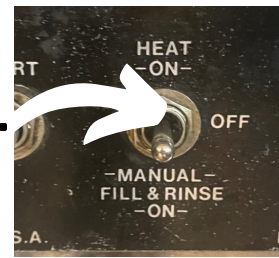

8

PUSH SCRAP TRAYS TO THE BACK

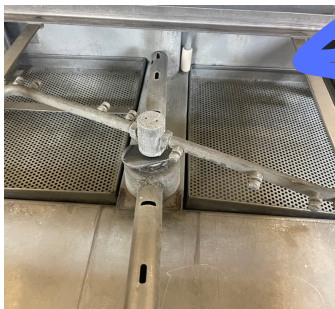

9

ADD 1/4 CUP DETERGENT TO UPPER RIGHT CORNER TRAY



DO NOT USE MORE THAN 1/4 CUP.
1/4 CUP WILL WASH UP TO 12 BASKETS!


10

LOAD BASKET OF DIRTY DISHES & CLOSE THE LID



11

LIFT TOGGLE TO THE HEAT POSITION AND PRESS START

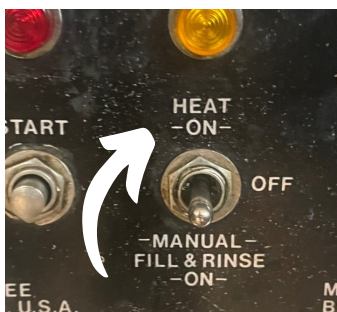

CYCLE LIGHT WILL LIGHT UP AFTER 45-60 SECONDS ONCE THE HEAT HAS BUILT UP.

12

REPEAT PROCESS AS NEEDED



THE CYCLE LIGHT WILL TURN OFF WHEN IT IS DONE.

- **LOAD** BASKET OF DISHES.
- **CLOSE** THE LID
- **PRESS START** BUTTON.
- IT WILL TAKE APPROX 1 MINUTE TO WASH AND 30 SECONDS TO RINSE.



TURNING ON THE HEAT WITH NO WATER IN THE TUB WILL RESULT IN AN OVERHEATED COMPONENT THAT COSTS \$2500 TO REPLACE.

13

TURNING OFF MACHINE

PLACE THE TOGGLE SWITCH TO THE MIDDLE OFF POSITION



CLEAN OFF SCRAP TRAYS AND RESET THEM TO THE FORWARD POSITION



TURN THE BLUE VALVE TO THE LEFT. BE SURE TO TURN IT TIGHT. THIS WILL DRAIN THE WATER



TURN THE SWITCH DOWN, TO THE OFF POSITION



CLOSE THE LID OF THE DISHWASHER



USE THE SQUEEGEE TO REMOVE ALL EXCESS WATER